

Repair instruction

Description: Hob Gas tap

Part number:

Look for Service Centres, Point of Sale addresses and other information on: www.thetford.eu

Version:

Date: May 2009

Tools required: Cross Head Screwdriver,

A

The changing of a gas tap needs to be done by a qualified competent person, access the tap by removing the pressing, details of which can be found in the "Spinflo Pressing" work instruction



B

Once it has been established which tap is faulty remove the thermocouple from the spade connection on the back of the gas tap



C

Undo the bolt that is holding the burner pipe onto the gas valve by using a 10mm spanner




D

If applicable now remove the 16mm nut from the front of the tap which is holding it to the oven



E

Remove the screw from the clamping plate which is holding the tap to the manifold pipe

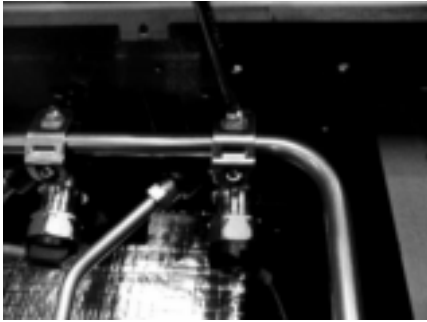

F

The gas tap can now be removed and exchanged.




G

Re-Secure the nut holding the tap to the oven



H

Fasten the burner pipe back in place and secure using 10mm spanner and a Torque Setting of 10Nm, also resecure the tap to the manifold pipe using the clamping plate.

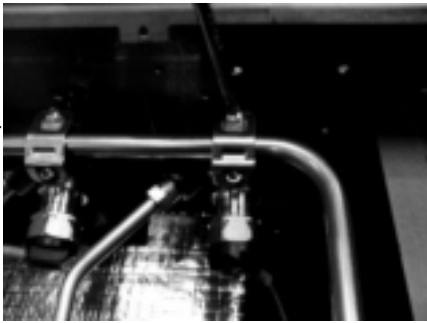

I

The oven can now be re-installed. Before testing the appliance please ensure a soundness test is carried out by a competent qualified person.

